




# Витрина Matta низка

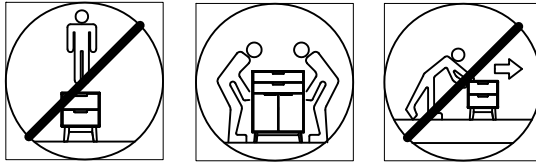


# Райтон

900 мм



400 мм

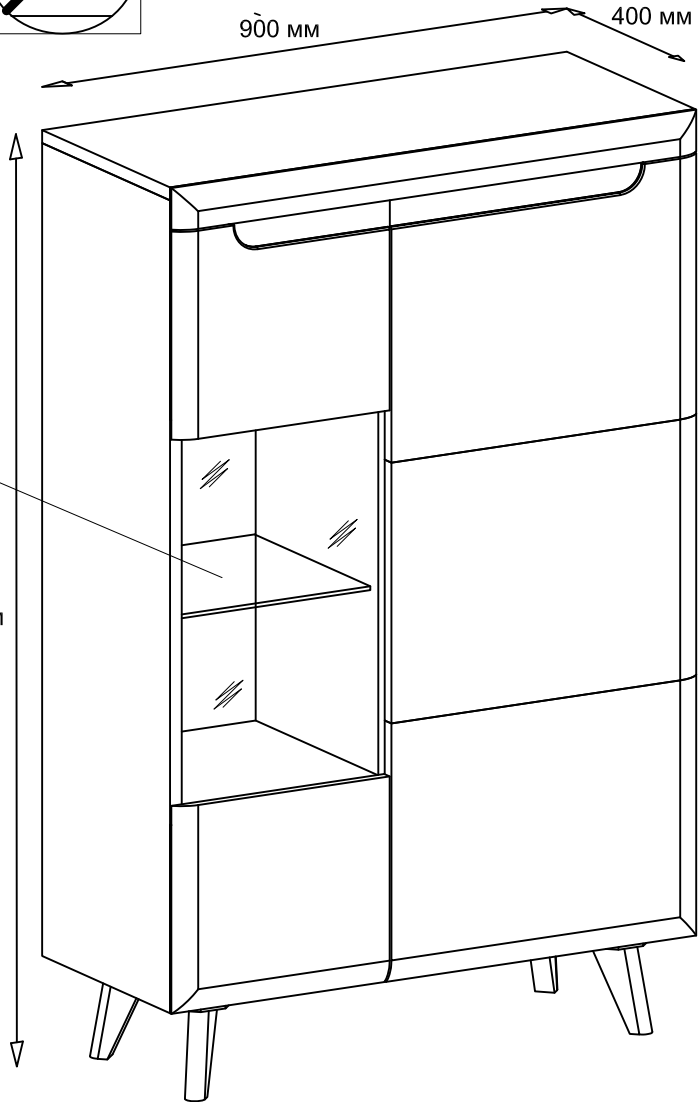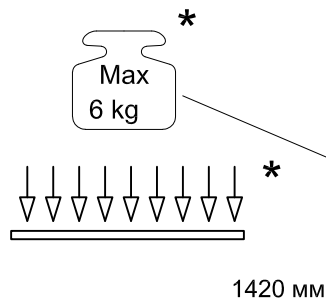



- |                                  |                              |
|----------------------------------|------------------------------|
| (D) Montageanleitung             | (GB) Assembly instructions   |
| (FR) Notice de montage           | (IT) Istruzioni di montaggio |
| (NL) Handleiding voor de montage | (PL) Instrukcja montażu      |
| (CZ) Montážní návod              | (SK) Návod na montáž         |
| (HU) Szerelési útmutató          | (RO) Instrucțiuni de montaj  |
| (TR) Montaj talimatları          | (RU) Инструкция по монтажу   |

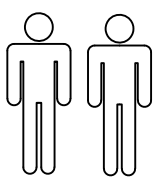

20 min

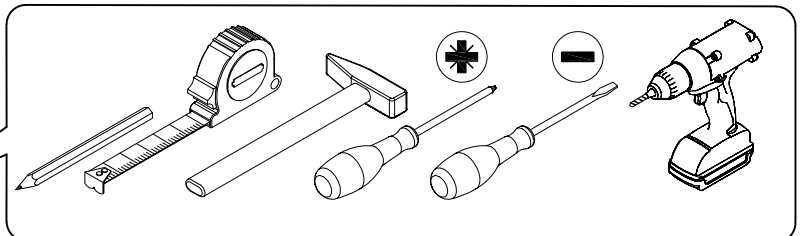


Name • Nom • Nome • Naam • Nazwa • Jaméno • Názov • Név • Denumire • Isim • Название	
Nr. • No. • N° • Номер • Č • Sz	
Typ • Type • Tip • Tipus • Tipo • Тип	

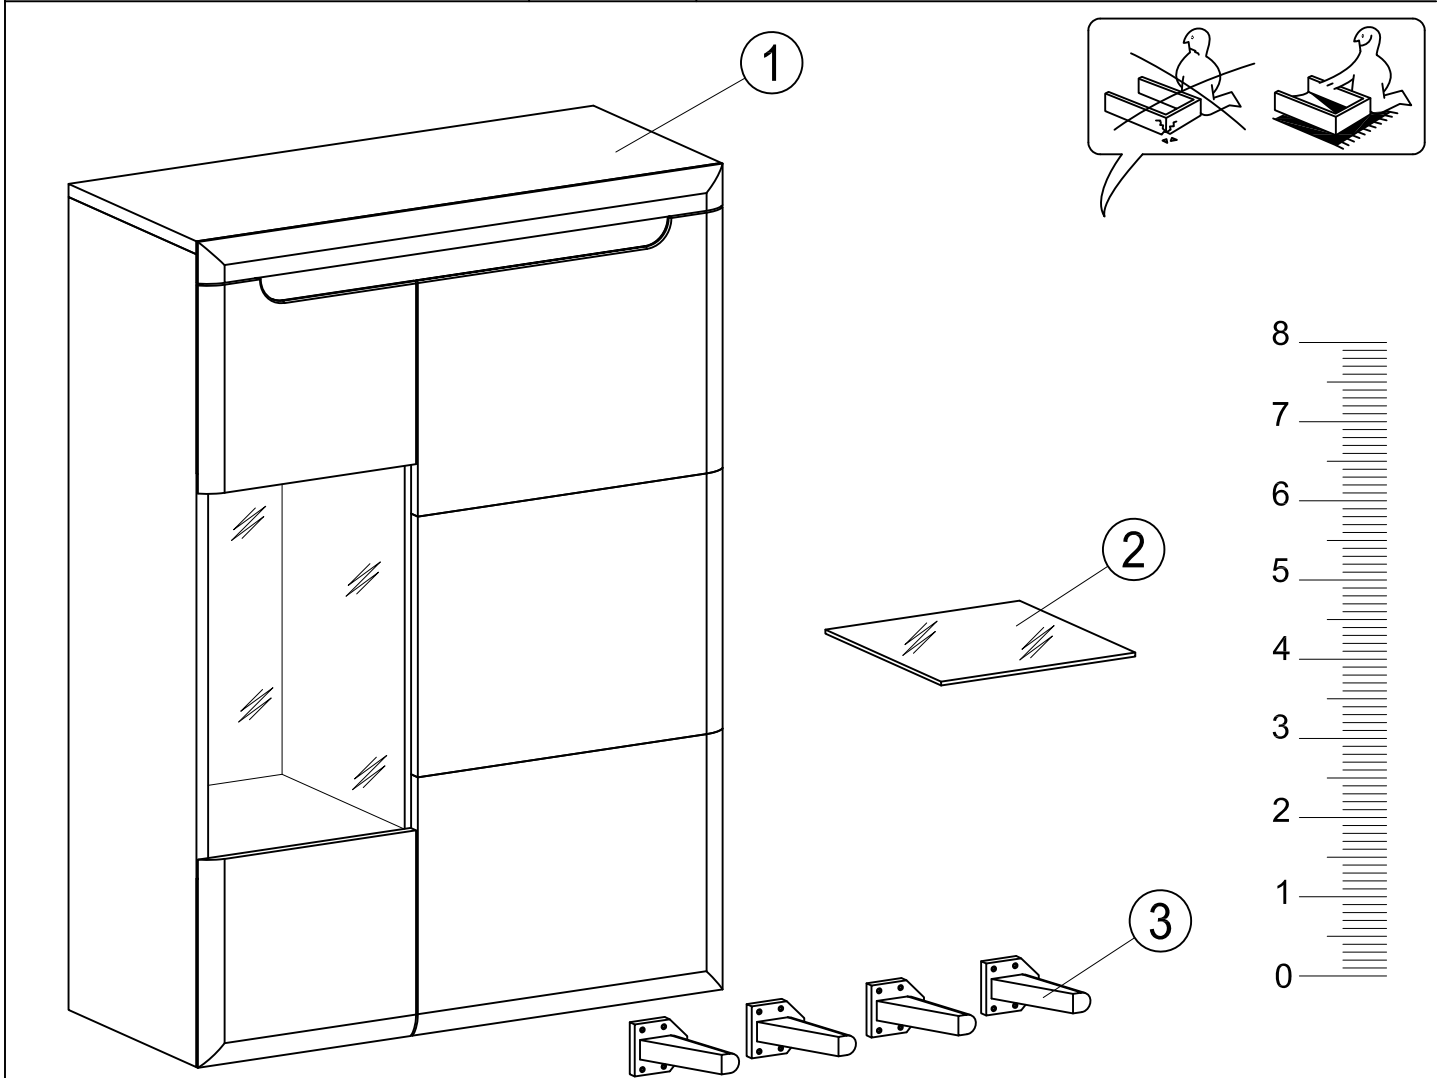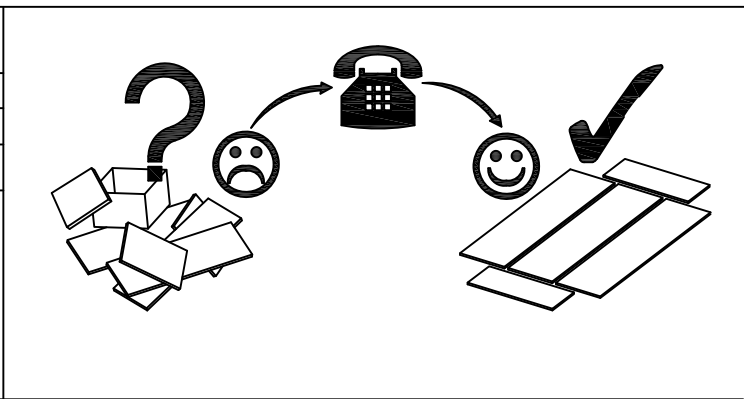




No	Size/MaB	Qty	
1	900x400x1340	1	
2	333x344x5	1	
3	150x100x80	4	



<b>Z1</b> x4 	<b>J2</b> x2  4x16	<b>J3</b> x16  4x30	<b>R1</b> x4 	<b>P1</b> x1 	<b>G1</b> x1 	<b>V1</b> x1 
------------------	--------------------------	---------------------------	------------------	------------------	------------------	------------------

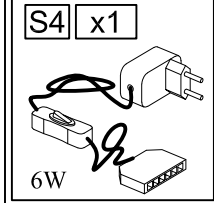

1

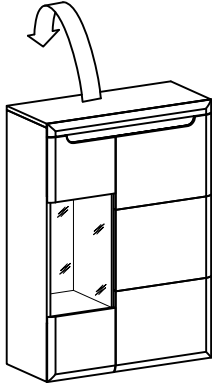




J3 x16	R1 x4
	
4x30	

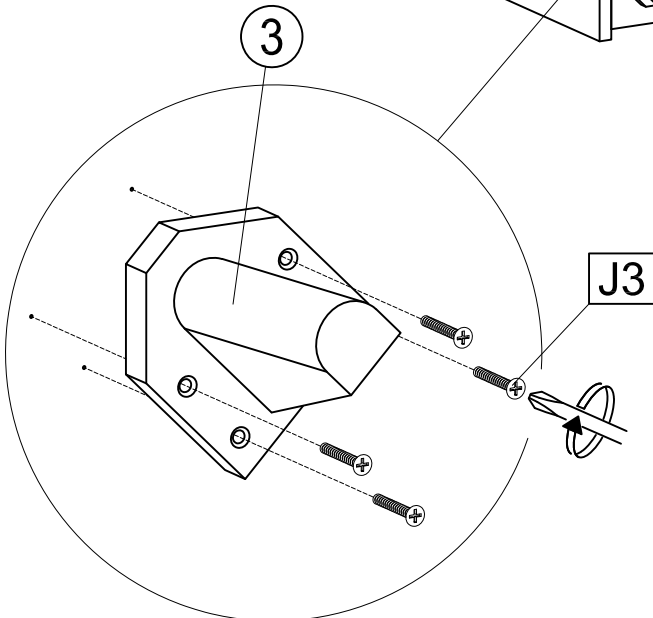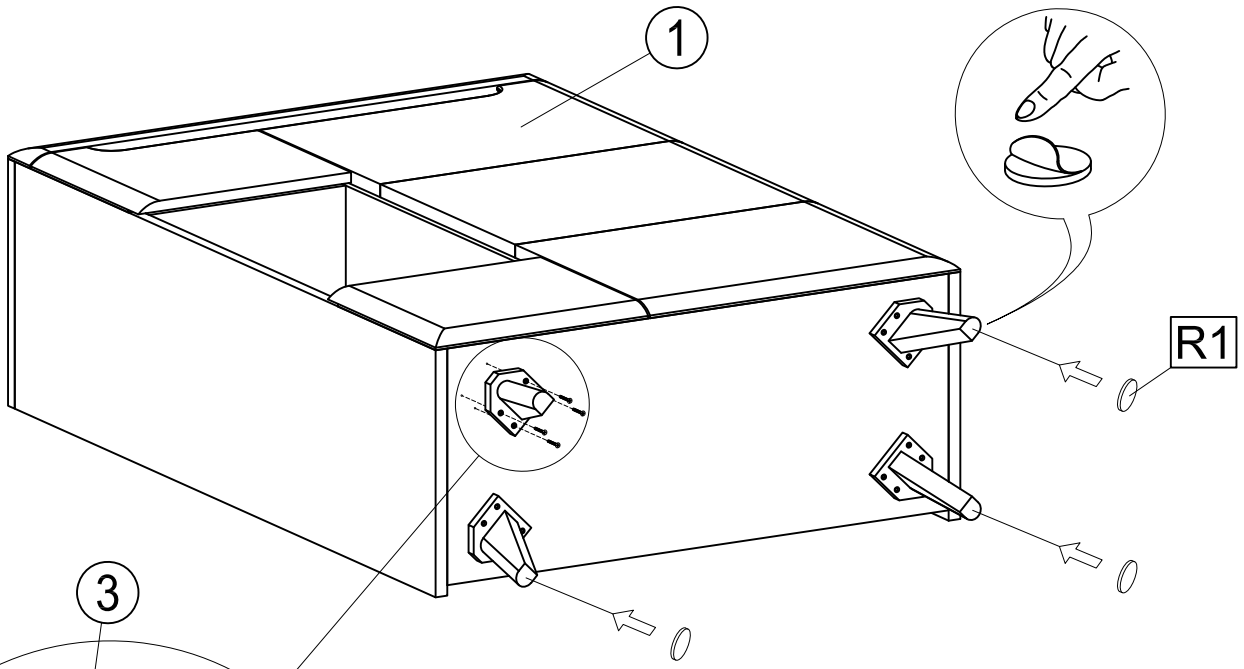

2


1

Z1 x4

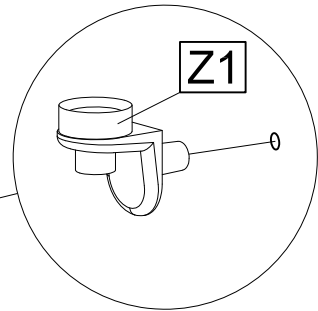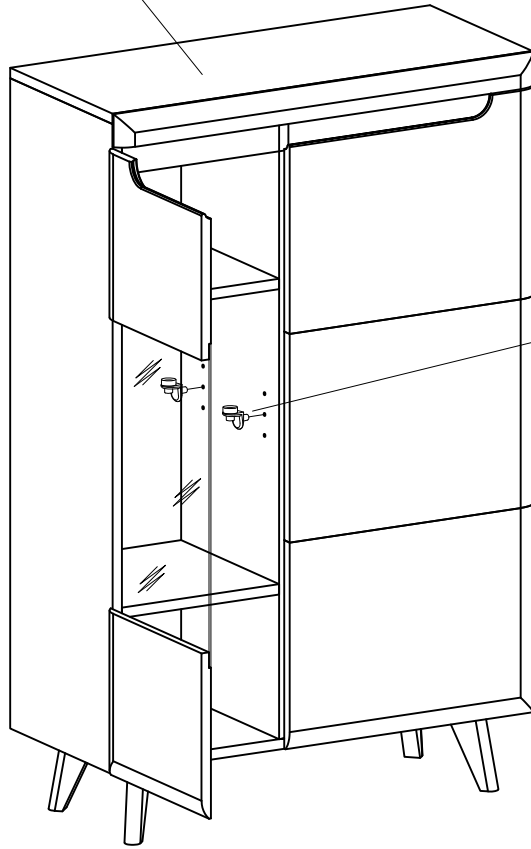



3

2

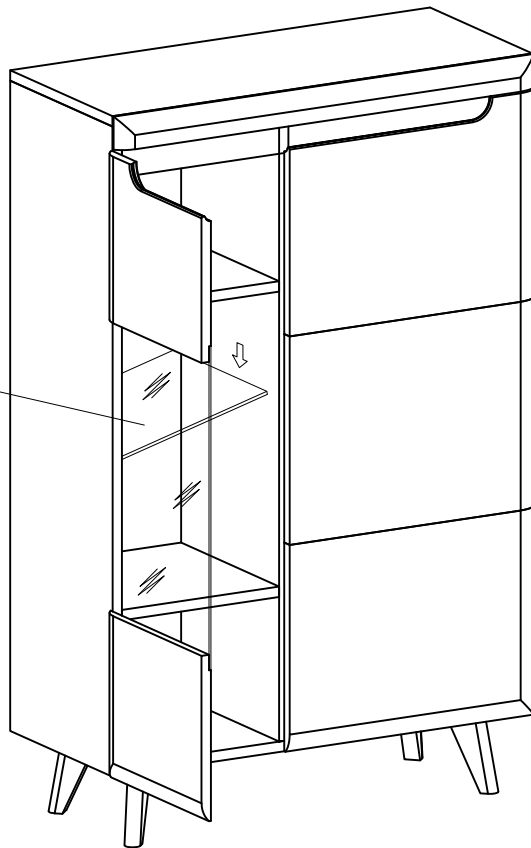

4

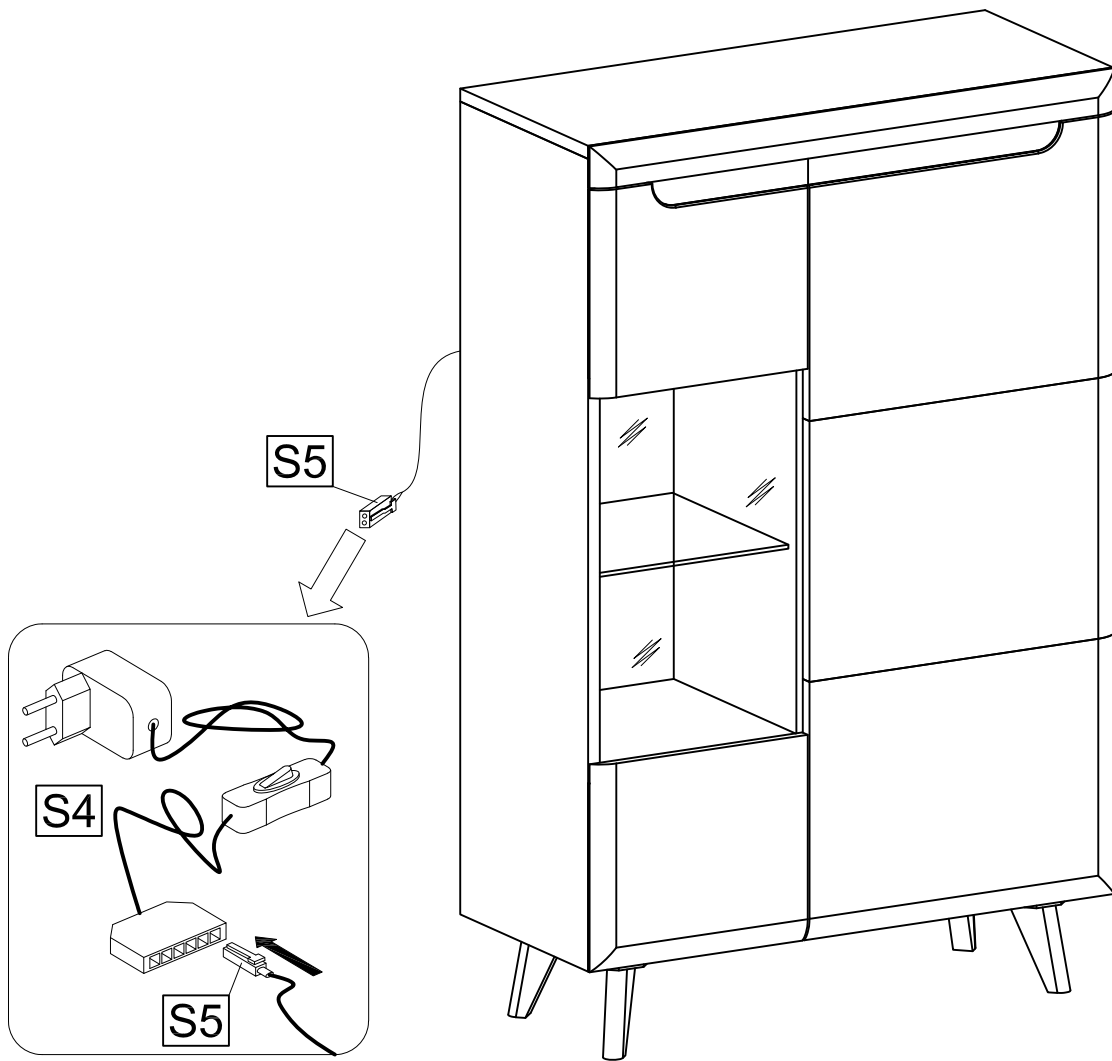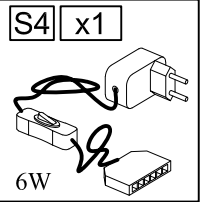

5

